


UTIL

Hal
Coathanger by Manuel Amaral Netto

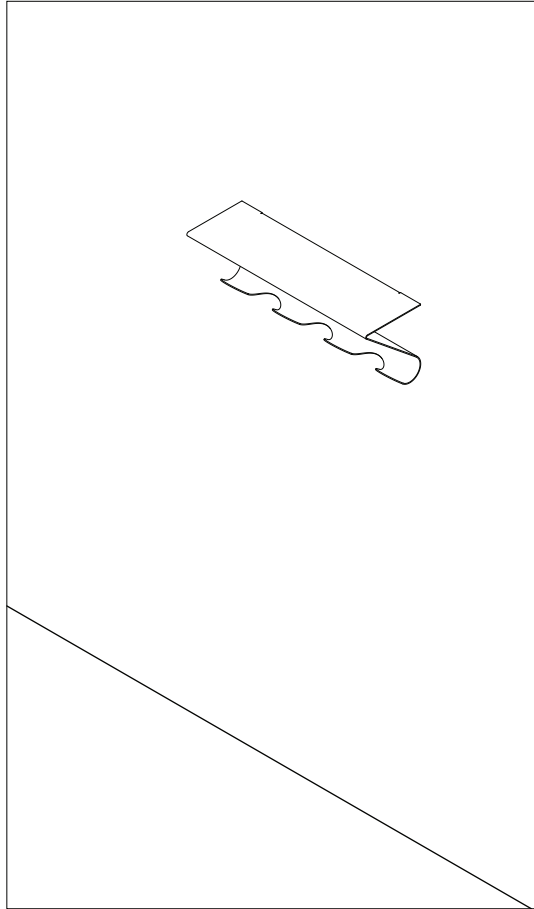

How to Install your HAL coat hanger

1a- Measure the holes to drill on your wall.

Hal 50 they are 35 cm apart.

Hal 80 they are 60 cm apart.

1b - We recommend placing your Hal at **135 cm from the floor.**

2a - Drill the two holes

3 - Screw the 2 screws almost all the way in. **Leave about 5mm of space in between the wall and the interior of the screw head** so you have enough space to slide it into the two slots.

4 - And that is it you have installed your Hal.

Care and Maintenance

Clean with a damp cloth

Weight Limit


20Kg

For any inquiries or defaults of your product do not hesitate to contact us at contact@thisisutil.com

Distance between wall holes:

A - Hal 80: 60cm

B - Hal 50: 35 cm

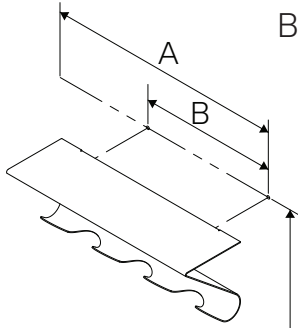

Recommended Height
135 cm

